 




AC AND VENTILATION

FRESHJETZ

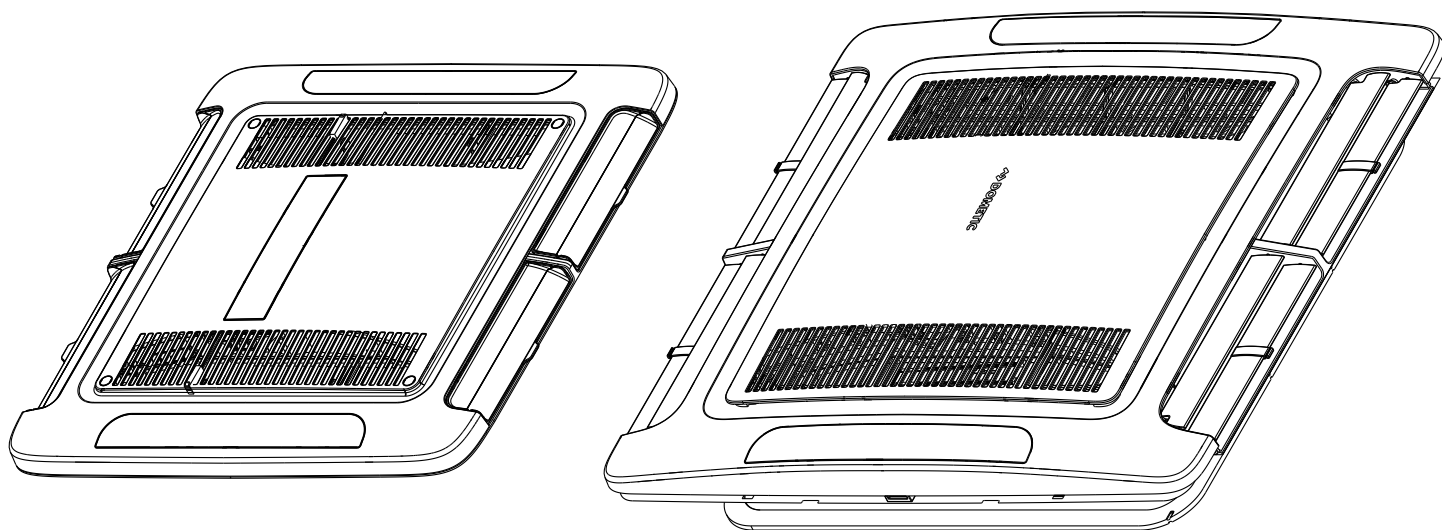

FJZ Mini ADB, FJZ Core ADB

EN	Air distribution box Installation Manual.....	3
CO	공기 분배함 설치 매뉴얼.....	9
CN	空气分配箱 安装说明.....	6

Copyright

© 2026 Dometic Group. The visual appearance of the contents of this manual is protected by copyright and design law. The underlying technical design and the products contained herein may be protected by design, patent or pending patent. The trademarks mentioned in this manual belong to Dometic Sweden AB. All rights are reserved.

English

1 Product Overview

The FJZ ADBDS is a compact alternative to standard FJX air distribution boxes. It is designed for RV installations requiring a minimized internal footprint, offering increased overhead clearance and a streamlined aesthetic.

The FJZ Mini ADB (Air Distribution Box) is a compact alternative to standard FJX air distribution boxes. It is designed for RV installations requiring a minimized internal footprint, offering increased overhead clearance and a streamlined aesthetic.

The FJZ Core ADB (Air Distribution Box) is an economical alternative to standard FJX air distribution boxes. It provides essential air distribution and control functions for RV installations where cost efficiency is a priority.

2 Compatibility

FJZ ADBDS

The FJZ ADBDS is compatible to the following FJX rooftop units:

- FJX4233
- FJX4333
- FJX7333
- FJX7433
- FJX7437
- FJX7557



NOTE The FJZ ADBDS is not compatible with the mechanical FJX 4233M rooftop unit.

FJZ Mini ADB/FJZ Core ADB

The FJZ Mini ADB/FJZ Core ADB is compatible to the following FJX rooftop units:

FJX4333, FJX7333, FJX7337, FJX7457

FJZ Mini ADB/FJZ Core ADB

The FJZ Mini ADB/FJZ Core ADB is compatible to the following FJX rooftop units:

FJX7333, FJX7337, FJX7457

3 General information

- The FJZ ADBDS has smaller external dimensions than the original FJX ADB. After replacement, imprints or marks from the previous FJX ADB may remain visible on the headliner.
- When an FJZ ADBDS is combined with an FJX rooftop unit, the following functions are unavailable:
 - Adaptive Power Mode
 - Smart Eco
- All other FJX ADB functions are supported when using the FJZ ADBDS.



Find the FJX operating manual at qr.dometic.com/bfhBwd.



4 General information

FJZ Mini ADB

- The FJZ Mini ADB has smaller external dimensions than the original FJX ADB. After replacement, imprints or marks from the previous FJX ADB may remain visible on the headliner.
- When an FJZ Mini ADB is combined with FJX rooftop unit, the adaptive power mode is unavailable.
- All other FJX ADB functions are supported when using the FJZ Mini ADB.

FJZ Core ADB

- When an FJZ Core ADB is combined with an FJX rooftop unit, the adaptive power mode is unavailable.
- The ADB light and air purifier features are available depending on the configuration.
- The FJZ Core ADB does not include a built-in control panel. To operate the rooftop unit, use the remote control.
- All other FJX ADB functions are available when using the FJZ Core ADB.



 
Find the FJX operating manual at qr.dometic.com/bfhBwd.



5 Installation types

Identify your installation type below and follow the relevant instructions.

5.1 Replacing an existing FJX ADB with an FJZ ADBDS

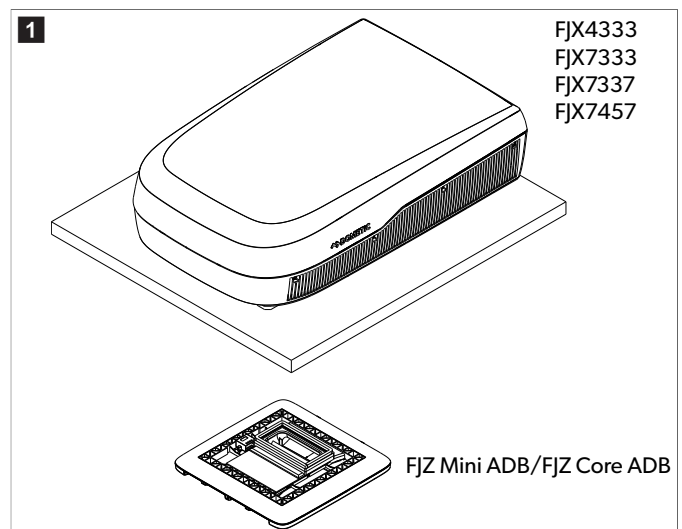


1. Remove the existing FJX ADB.
2. Install the FJZ ADBDS following the FJZ installation instructions, starting with the chapter "Installing the FJZ ADBDS".



Find the FJZ installation manual at qr.dometic.com/bgCjPx.



 5.2 New installation of an FJX rooftop unit with an FJZ ADBDS

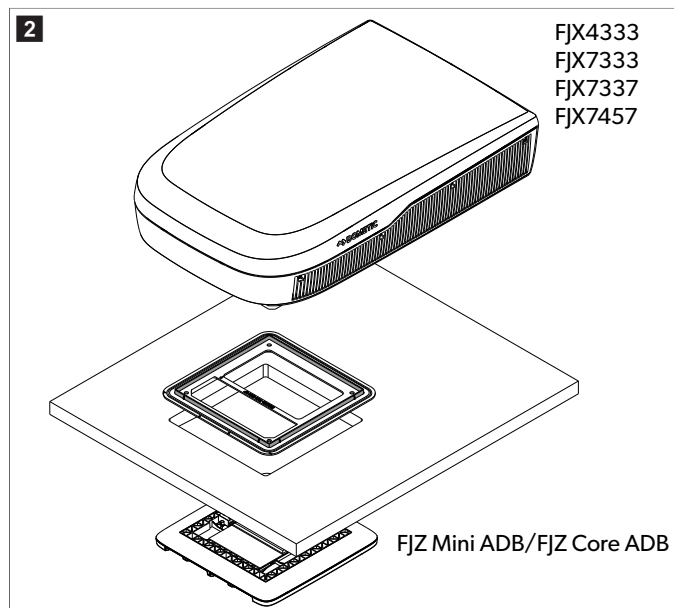

1. Obtain the required installation frame for the FJX rooftop unit (not included with the FJZ ADBDS):



NOTE A separate installation frame is required for the FJX rooftop unit. The installation frame is available from Dometic Spare Parts, No. 450020818.

2. Install the FJX rooftop unit according to the FJX rooftop unit installation instructions.



Find the FJX installation manual at qr.dometic.com/bgYEwi.



3. Install the FJZ ADBDS according to the FJZ installation instructions, starting with the chapter "Installing the FJZ ADBDS".



 
Find the FJZ installation manual at qr.dometic.com/bgCjPx.



6 Installation types

Identify your installation type below and follow the relevant instructions.

6.1 Replacing an existing FJX ADB with an FJZ Mini ADB/FJZ Core ADB

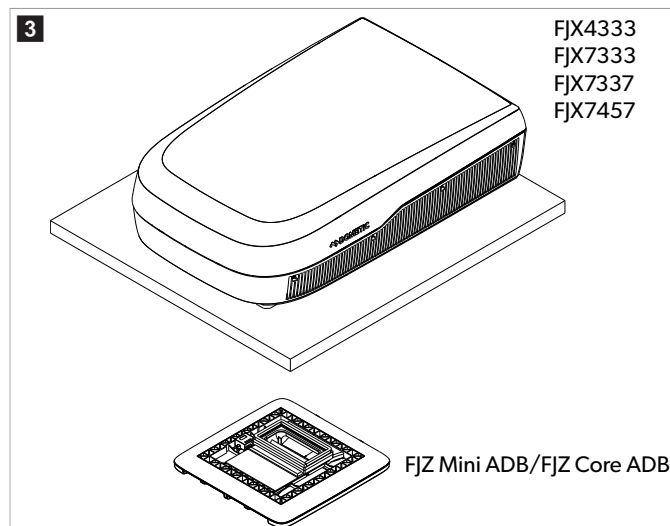

1. Remove the existing FJX ADB.
2. Install the new ADB:

- **FJZ Mini ADB:** Follow the FJZ Installation Instructions, starting with the chapter "Installing the FJZ Mini ADB."
- **FJZ Core ADB:** Follow either the FJZ installation instructions, starting with the chapter "Installing the FJZ Core ADB" or the FJX installation instructions, starting with the chapter "Installation".



 
Find the FJZ installation manual at qr.dometic.com/bgCjPx.



Find the FJX installation manual at qr.dometic.com/bgYEwi.



6.2 New installation of an FJX rooftop unit with an FJZ Mini ADB/FJZ Core ADB

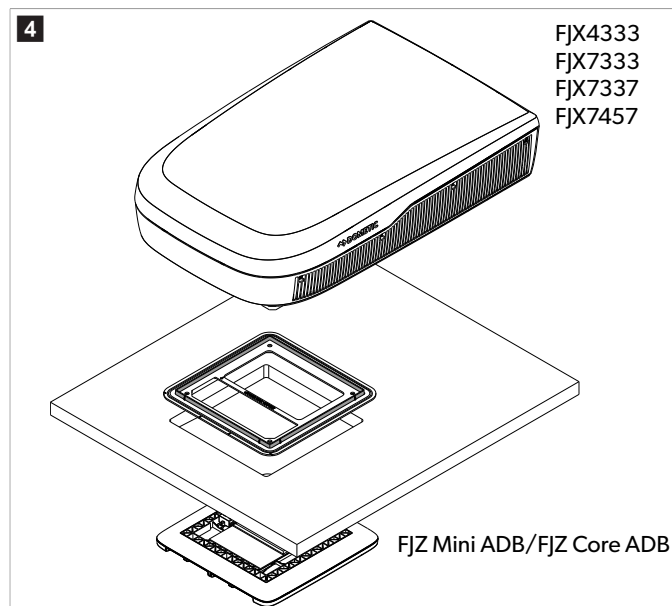

1. Install the FJX rooftop unit according to the FJX rooftop unit installation instructions.
2. Install the ADB:
 - **FJZ Mini ADB:** Follow the FJZ Installation Instructions, starting with the chapter "Installing the FJZ Mini ADB."
 - **FJZ Core ADB:** Follow either the FJZ installation instructions, starting with the chapter "Installing the FJZ Core ADB" or the FJX installation instructions, starting with the chapter "Installation".



Find the FJZ installation manual at
qr.dometic.com/bgCjPx.



Find the FJX installation manual at
qr.dometic.com/bgYEwi.



简体中文

1 产品概述

FJZ ADBDS 是标准 FJX 空气分配箱的一款紧凑型替代产品。它专为需要尽可能少占用车内空间的房车安装而设计，能够提供更大的顶部净空，并带来流线型的美学外观。

FJZ Mini ADB（空气分配箱）是标准 FJX 空气分配箱的一款紧凑型替代产品。它专为需要尽可能少占用车内空间的房车安装而设计，能够提供更大的顶部净空，并带来流线型的美学外观。

FJZ Core ADB（空气分配箱）是标准 FJX 空气分配箱的一款经济型替代产品。它专为注重成本效益的房车安装而设计，提供基础的送风与控制功能。

2 兼容性

FJZ ADBDS

FJZ ADBDS 兼容以下 FJX 车顶空调机组：

- FJX4233
- FJX4333
- FJX7333
- FJX7433
- FJX7437
- FJX7557

 **提示** FJZ ADBDS 不兼容机械式 FJX 4233M 车顶空调机组。

FJZ Mini ADB/FJZ Core ADB

FJZ Mini ADB/FJZ Core ADB 兼容以下 FJX 车顶空调机组：

FJX4333、FJX7333、FJX7337、FJX7457

FJZ Mini ADB/FJZ Core ADB

FJZ Mini ADB/FJZ Core ADB 兼容以下 FJX 车顶空调机组：

FJX7333、FJX7337、FJX7457

3 一般信息

- FJZ ADBDS 的外形尺寸小于原有的 FJX ADB。更换后，车顶棚上可能会留下原 FJX ADB 的压痕或印记。
- 当 FJZ ADBDS 搭配 FJX 车顶空调机组使用时，以下功能将不可用：
 - 自适应功率模式
 - 智能节能模式
- 搭配 FJZ ADBDS 使用时，FJX ADB 的所有其他功能均可正常使用。

 FJX 使用说明书参
见：qr.dometic.com/bfhBwd。



4 一般信息

FJZ Mini ADB

- FJZ Mini ADB 的外形尺寸小于原有的 FJX ADB。更换后，车顶棚上可能会留下原 FJX ADB 的压痕或印记。

- 当 FJZ Mini ADB 搭配 FJX 车顶空调机组使用时，自适应功率模式将不可用。
- 搭配 FJZ Mini ADB 使用时，FJX ADB 的所有其他功能均可正常使用。

FJZ Core ADB

- 当 FJZ Core ADB 搭配 FJX 车顶空调机组使用时，自适应功率模式将不可用。
- ADB 的照明和空气净化功能视具体配置而定。
- FJZ Core ADB 未配备内置控制面板。如需操作车顶空调机组，请使用遥控器。
- 搭配 FJZ Core ADB 使用时，FJX ADB 的所有其他功能均可正常使用。



 
FJX 使用说明书参
见：qr.dometic.com/bfhBwd。



5 安装类型

请在下方确认您的安装类型，并按照相关说明进行操作。

5.1 将原有的 FJX ADB 更换为 FJZ ADBDS

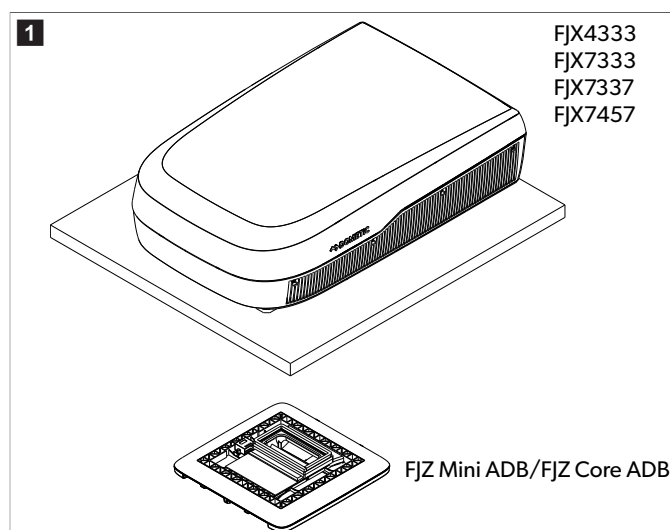


1. 卸下原有的 FJX ADB。
2. 请按照《FJZ 安装说明书》安装 FJZ ADBDS，并从“安装 FJZ ADBDS”章节开始操作。



FJZ 安装说明书参
见：qr.dometic.com/bgCJPx。



 5.2 FJX 车顶空调机组搭配 FJZ ADBDS 的全新安装

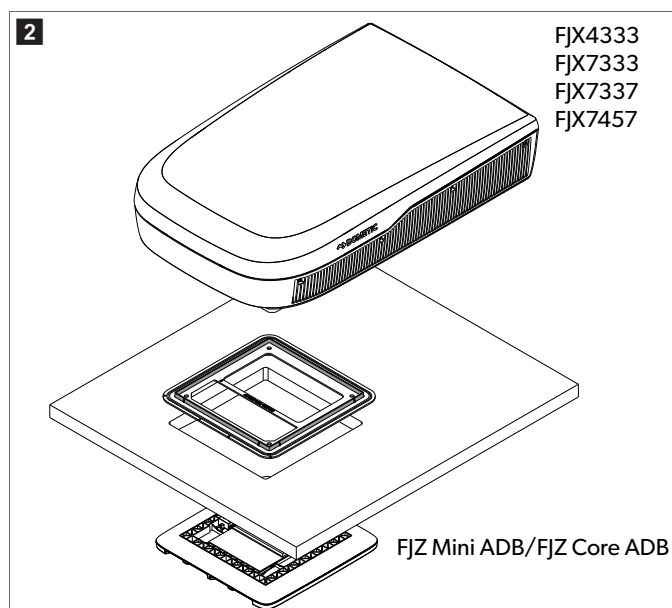

1. 准备好 FJX 车顶空调机组所需的安装框架（FJZ ADBDS 包装内不含此部件）：



提示 安装 FJX 车顶空调机组需单独配备安装框架。安装框架可向 Dometic 备件部购买，零件编号 450020818。

2. 请按照《FJX 车顶空调机组安装说明书》完成车顶空调机组的安装。



FJX 安装说明书参
见：qr.dometic.com/bgYEwi。



3. 请按照《FJZ 安装说明书》安装 FJZ ADBDS，并从“安装 FJZ ADBDS”章节开始操作。



 
FJZ 安装说明书参
见：qr.dometic.com/bgCJPx。



6 安装类型

请在下方确认您的安装类型，并按照相关说明进行操作。

6.1 将原有的 FJX ADB 更换为 FJZ Mini ADB/FJZ Core ADB

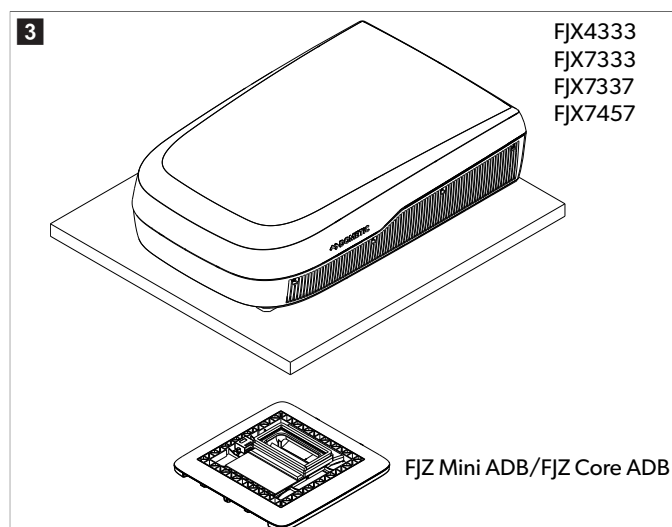

1. 卸下原有的 FJX ADB。
2. 安装新的 ADB：

- **FJZ Mini ADB**：请按照《FJZ 安装说明书》进行安装，并从“安装 FJZ Mini ADB”章节开始操作。
- **FJZ Core ADB**：请按照《FJZ 安装说明书》从“安装 FJZ Core ADB”章节开始操作；或按照《FJX 安装说明书》从“安装”章节开始操作。



 
FJZ 安装说明书参
见：qr.dometic.com/bgCJPx。



FJX 安装说明书参
见：qr.dometic.com/bgYEwi。



6.2 FJX 车顶空调机组搭配 FJZ Mini ADB/FJZ Core ADB 的全新安装

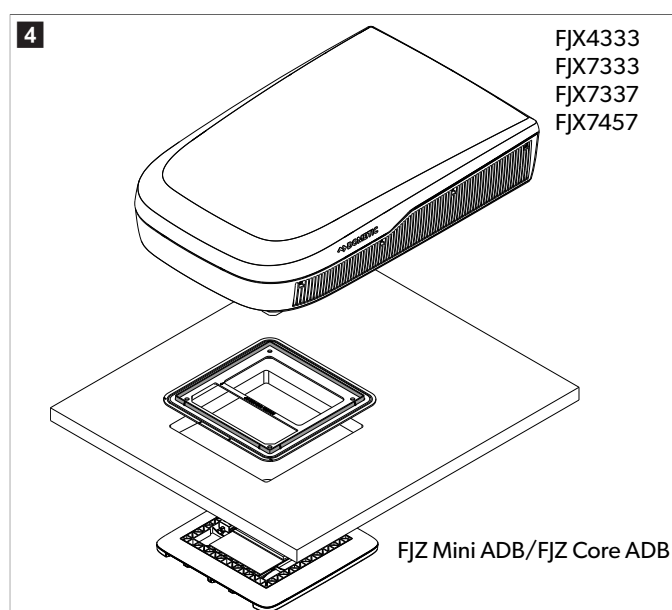

1. 请按照《FJX 车顶空调机组安装说明书》完成车顶空调机组的安装。

2. 安装 ADB:

- **FJZ Mini ADB:** 请按照《FJZ 安装说明书》进行安装，并从“安装 FJZ Mini ADB”章节开始操作。
- **FJZ Core ADB:** 请按照《FJZ 安装说明书》从“安装 FJZ Core ADB”章节开始操作；或按照《FJX 安装说明书》从“安装”章节开始操作。



FJZ 安装说明书参
见：qr.dometic.com/bgCJPx。



FJX 安装说明书参
见：qr.dometic.com/bgYEwi。



한국어

1 제품 개요

FJZ ADBDS는 표준 FJX 공기 분배함보다 콤팩트한 제품입니다. 내부 설치 공간을 최소화해야 하는 RV 설치용으로 설계되었으며, 상부 공간을 늘리고 유선형 디자인을 채택했습니다.

FJZ Mini ADB(공기 분배함)는 표준 FJX 공기 분배함보다 콤팩트한 제품입니다. 내부 설치 공간을 최소화해야 하는 RV 설치용으로 설계되었으며, 상부 공간을 늘리고 유선형 디자인을 채택했습니다.

FJZ Core ADB(공기 분배함)는 표준 FJX 공기 분배 박스보다 경제적인 제품입니다. 비용 효율성이 가장 중요한 RV 설치에 필수적인 공기 분배 및 제어 기능을 제공합니다.

2 호환성

FJZ ADBDS

FJZ ADBDS는 다음 FJX 루프탑 유닛과 호환됩니다.

- FJX4233
- FJX4333
- FJX7333
- FJX7433
- FJX7437
- FJX7557



참고 FJZ ADBDS는 기계식 FJX 4233M 루프탑 유닛과 호환되지 않습니다.

FJZ Mini ADB/FJZ Core ADB

FJZ Mini ADB/FJZ Core ADB는 다음 FJX 루프탑 유닛과 호환됩니다.

FJX4333, FJX7333, FJX7337, FJX7457

FJZ Mini ADB/FJZ Core ADB

FJZ Mini ADB/FJZ Core ADB는 다음 FJX 루프탑 유닛과 호환됩니다.

FJX7333, FJX7337, FJX7457

3 일반 정보

- FJZ ADBDS는 기존 FJX ADB보다 외부 크기가 작습니다. 교체 후 이전 FJX ADB의 자국이나 표시가 헤드라이너에 계속 보일 수 있습니다.
- FJZ ADBDS를 FJX 루프탑 유닛과 결합하면 다음 기능을 사용할 수 없습니다.
 - 적응형 전원 모드
 - 스마트 에코
- 다른 모든 FJX ADB 기능은 FJZ ADBDS 사용 시 지원됩니다.



FJX 사용 설명서를
qr.dometic.com/bfhBwd에서
찾아보십시오.



4 일반 정보

FJZ Mini ADB

- FJZ Mini ADB는 기존 FJX ADB보다 외부 크기가 작습니다. 교체 후 이전 FJX ADB의 자국이나 표시가 헤드라이너에 계속 보일 수 있습니다.

- FJZ Mini ADB를 FJX 루프탑 유닛과 결합하면 적응형 전원 모드를 사용할 수 없습니다.
- 다른 모든 FJX ADB 기능은 FJZ Mini ADB 사용 시 지원됩니다.

FJZ Core ADB

- FJZ Core ADB가 FJX 루프탑 유닛과 결합하면 적응형 전원 모드를 사용할 수 없습니다.
- ADB 조명 및 공기 청정기 기능은 구성에 따라 사용할 수 있습니다.
- FJZ Core ADB에는 내장형 제어판이 포함되어 있지 않습니다. 루프탑 유닛을 작동하려면 리모컨을 사용하십시오.
- 다른 모든 FJX ADB 기능은 FJZ Core ADB 사용 시 지원됩니다.



 
FJX 사용 설명서를
qr.dometic.com/bfhBwd에서
찾아보십시오.



5 설치 유형

아래에서 설치 유형을 확인하고 관련 지침을 따르십시오.

5.1 기존 FJX ADB를 FJZ ADBDS로 교체

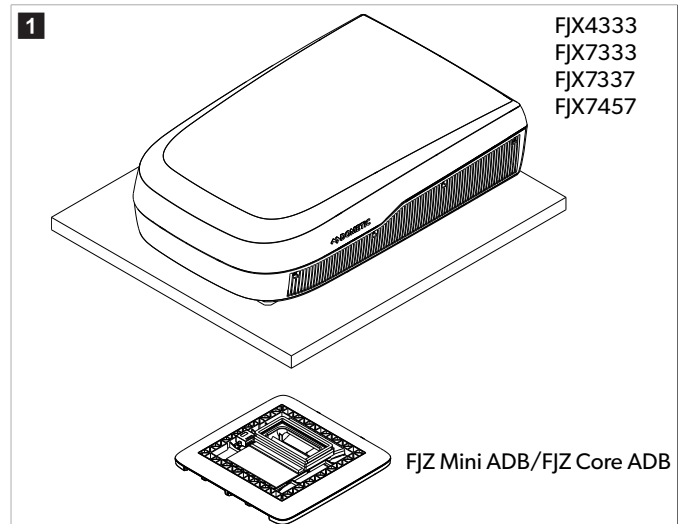


1. 기존 FJX ADB를 분리합니다.
2. "FJZ ADBDS 설치" 장부터 시작하는 FJZ 설치 지침에 따라 FJZ ADBDS를 설치합니다.



FJZ 설치 매뉴얼은
qr.dometic.com/bgCJPx에서
찾아보십시오.



 5.2 FJZ ADBDS 포함 FJX 루프탑 유닛의 신규 설치

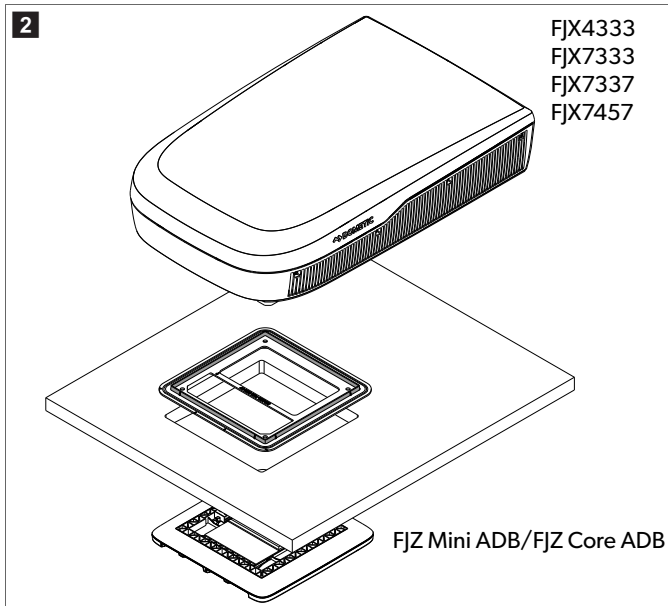

1. FJX 루프탑 유닛에 필요한 설치 프레임을 준비합니다(FJZ ADBDS에 포함되지 않음).



참고 FJX 루프탑 유닛에는 별도의 설치 프레임이 필요합니다. 설치 프레임은 Dometic 예비 부품에서 부품 번호 450020818로 구입할 수 있습니다.

2. FJX 루프탑 유닛 설치 지침에 따라 FJX 루프탑 유닛을 설치합니다.



FJX 설치 매뉴얼은 qr.dometic.com/bgYEwi에서 찾아보십시오.



3. "FJZ ADBDS 설치" 장부터 시작하는 FJZ 설치 지침에 따라 FJZ ADBDS를 설치합니다.



 
FJZ 설치 매뉴얼은 qr.dometic.com/bgCJPx에서 찾아보십시오.



6 설치 유형

아래에서 설치 유형을 확인하고 관련 지침을 따르십시오.

6.1 기존 FJX ADB를 FJZ Mini ADB/FJZ Core ADB로 교체

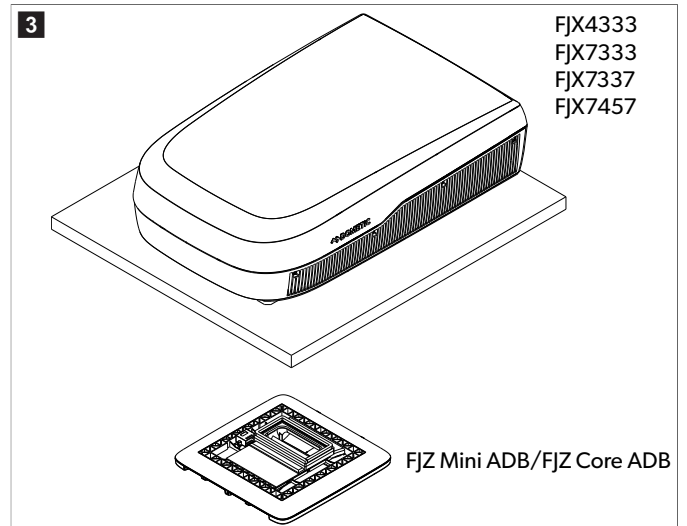

1. 기존 FJX ADB를 분리합니다.

2. 새 ADB를 설치합니다.

- **FJZ Mini ADB:** "FJZ Mini ADB 설치" 장부터 시작하는 FJZ 설치 지침을 따릅니다.
- **FJZ Core ADB:** "FJZ Core ADB 설치" 장부터 시작하는 FJZ 설치 지침을 따르거나 "설치" 장부터 시작하는 FJX 설치 지침을 따릅니다.



 
FJZ 설치 매뉴얼은 qr.dometic.com/bgCJPx에서 찾아보십시오.



FJX 설치 매뉴얼은 qr.dometic.com/bgYEwi에서 찾아보십시오.



6.2 FJZ Mini ADB/FJZ Core ADB 포함 FJX 루프탑 유닛의 신규 설치

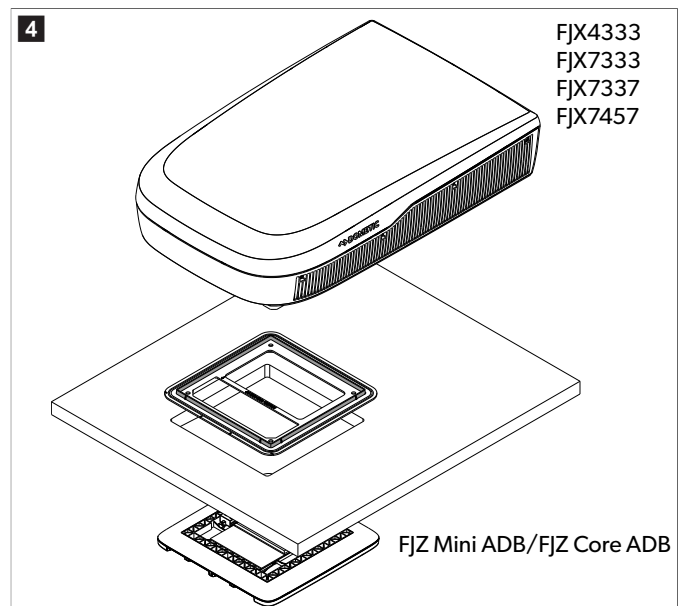

1. FJX 루프탑 유닛 설치 지침에 따라 FJX 루프탑 유닛을 설치합니다.

2. ADB를 설치합니다.

- **FJZ Mini ADB:** "FJZ Mini ADB 설치" 장부터 시작하는 FJZ 설치 지침을 따릅니다.
- **FJZ Core ADB:** "FJZ Core ADB 설치" 장부터 시작하는 FJZ 설치 지침을 따르거나 "설치" 장부터 시작하는 FJX 설치 지침을 따릅니다.



FJZ 설치 매뉴얼은
qr.dometic.com/bgCJPx에서
찾아보십시오.



FJX 설치 매뉴얼은
qr.dometic.com/bgYEwi에서
찾아보십시오.



dometic.com

**YOUR LOCAL
DEALER**

dometic.com/dealer

**YOUR LOCAL
SUPPORT**

dometic.com/contact

**YOUR LOCAL
SALES OFFICE**

dometic.com/sales-offices